

1. Open your web browser and navigate to the URL;


http://<Device PAP IP>

Enter username and password;

Default username, password, both will be: dlink

2. For SIP, Go to **SIP Configuration**, Enter SIP account and password in relevant fields and follow the below image for other settings,

SIP Configuration

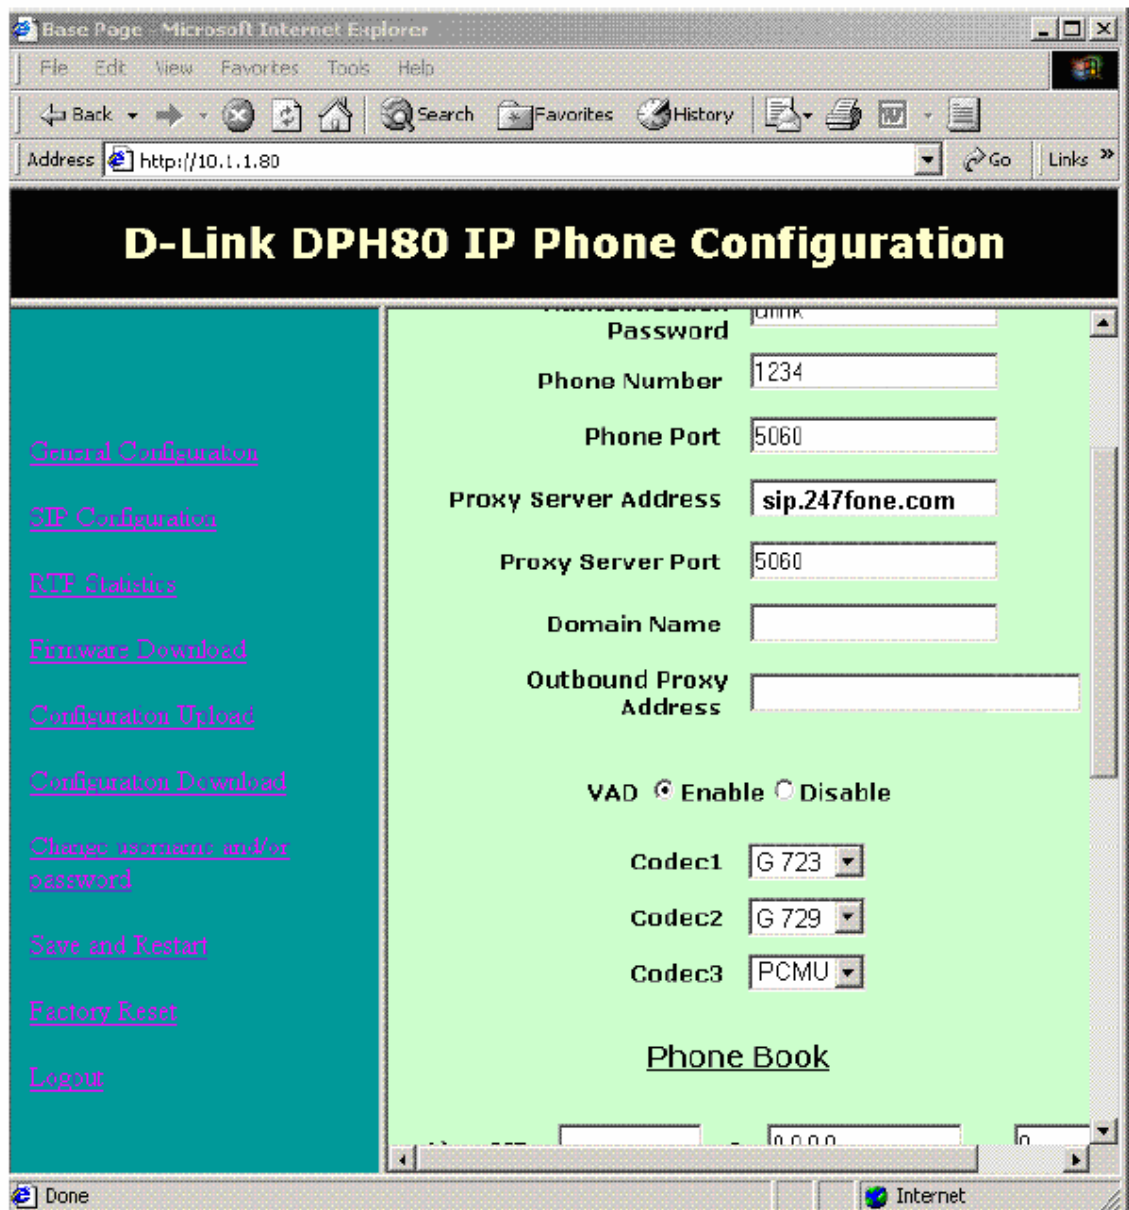

Proxy Server Address: **sip.247fone.com**

Proxy Server Port: **5060**

-
3. Now press "Save and Restart" button. Device would restart and Press on "Log off". Now your device is configured and you're ready to make calls.

If you experience any problem with configurations, please do feel free to call for support, and we'll be very glad to assist you.